

QUICK RELEASE KNOBS


Quick release knobs are used in such applications where the knob has to be completely removed after the releasing operation and refitted very rapidly for re-clamping.

Instructions:

- Tilt the knob over the top of the threaded spindle. Rapidly adjust the knob to the necessary position
- 2. When in position, tilt the knob upright into a straight position. Slightly turn the knob to engage the threads on knob and spindle to achieve clamping



5SA 1/4-20 & 5/16-18

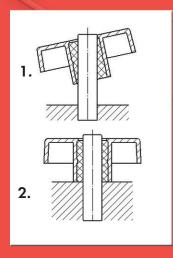

F6 1/4-20, 5/16-18, 3/8-16, 1/2-13

